



Inset 1

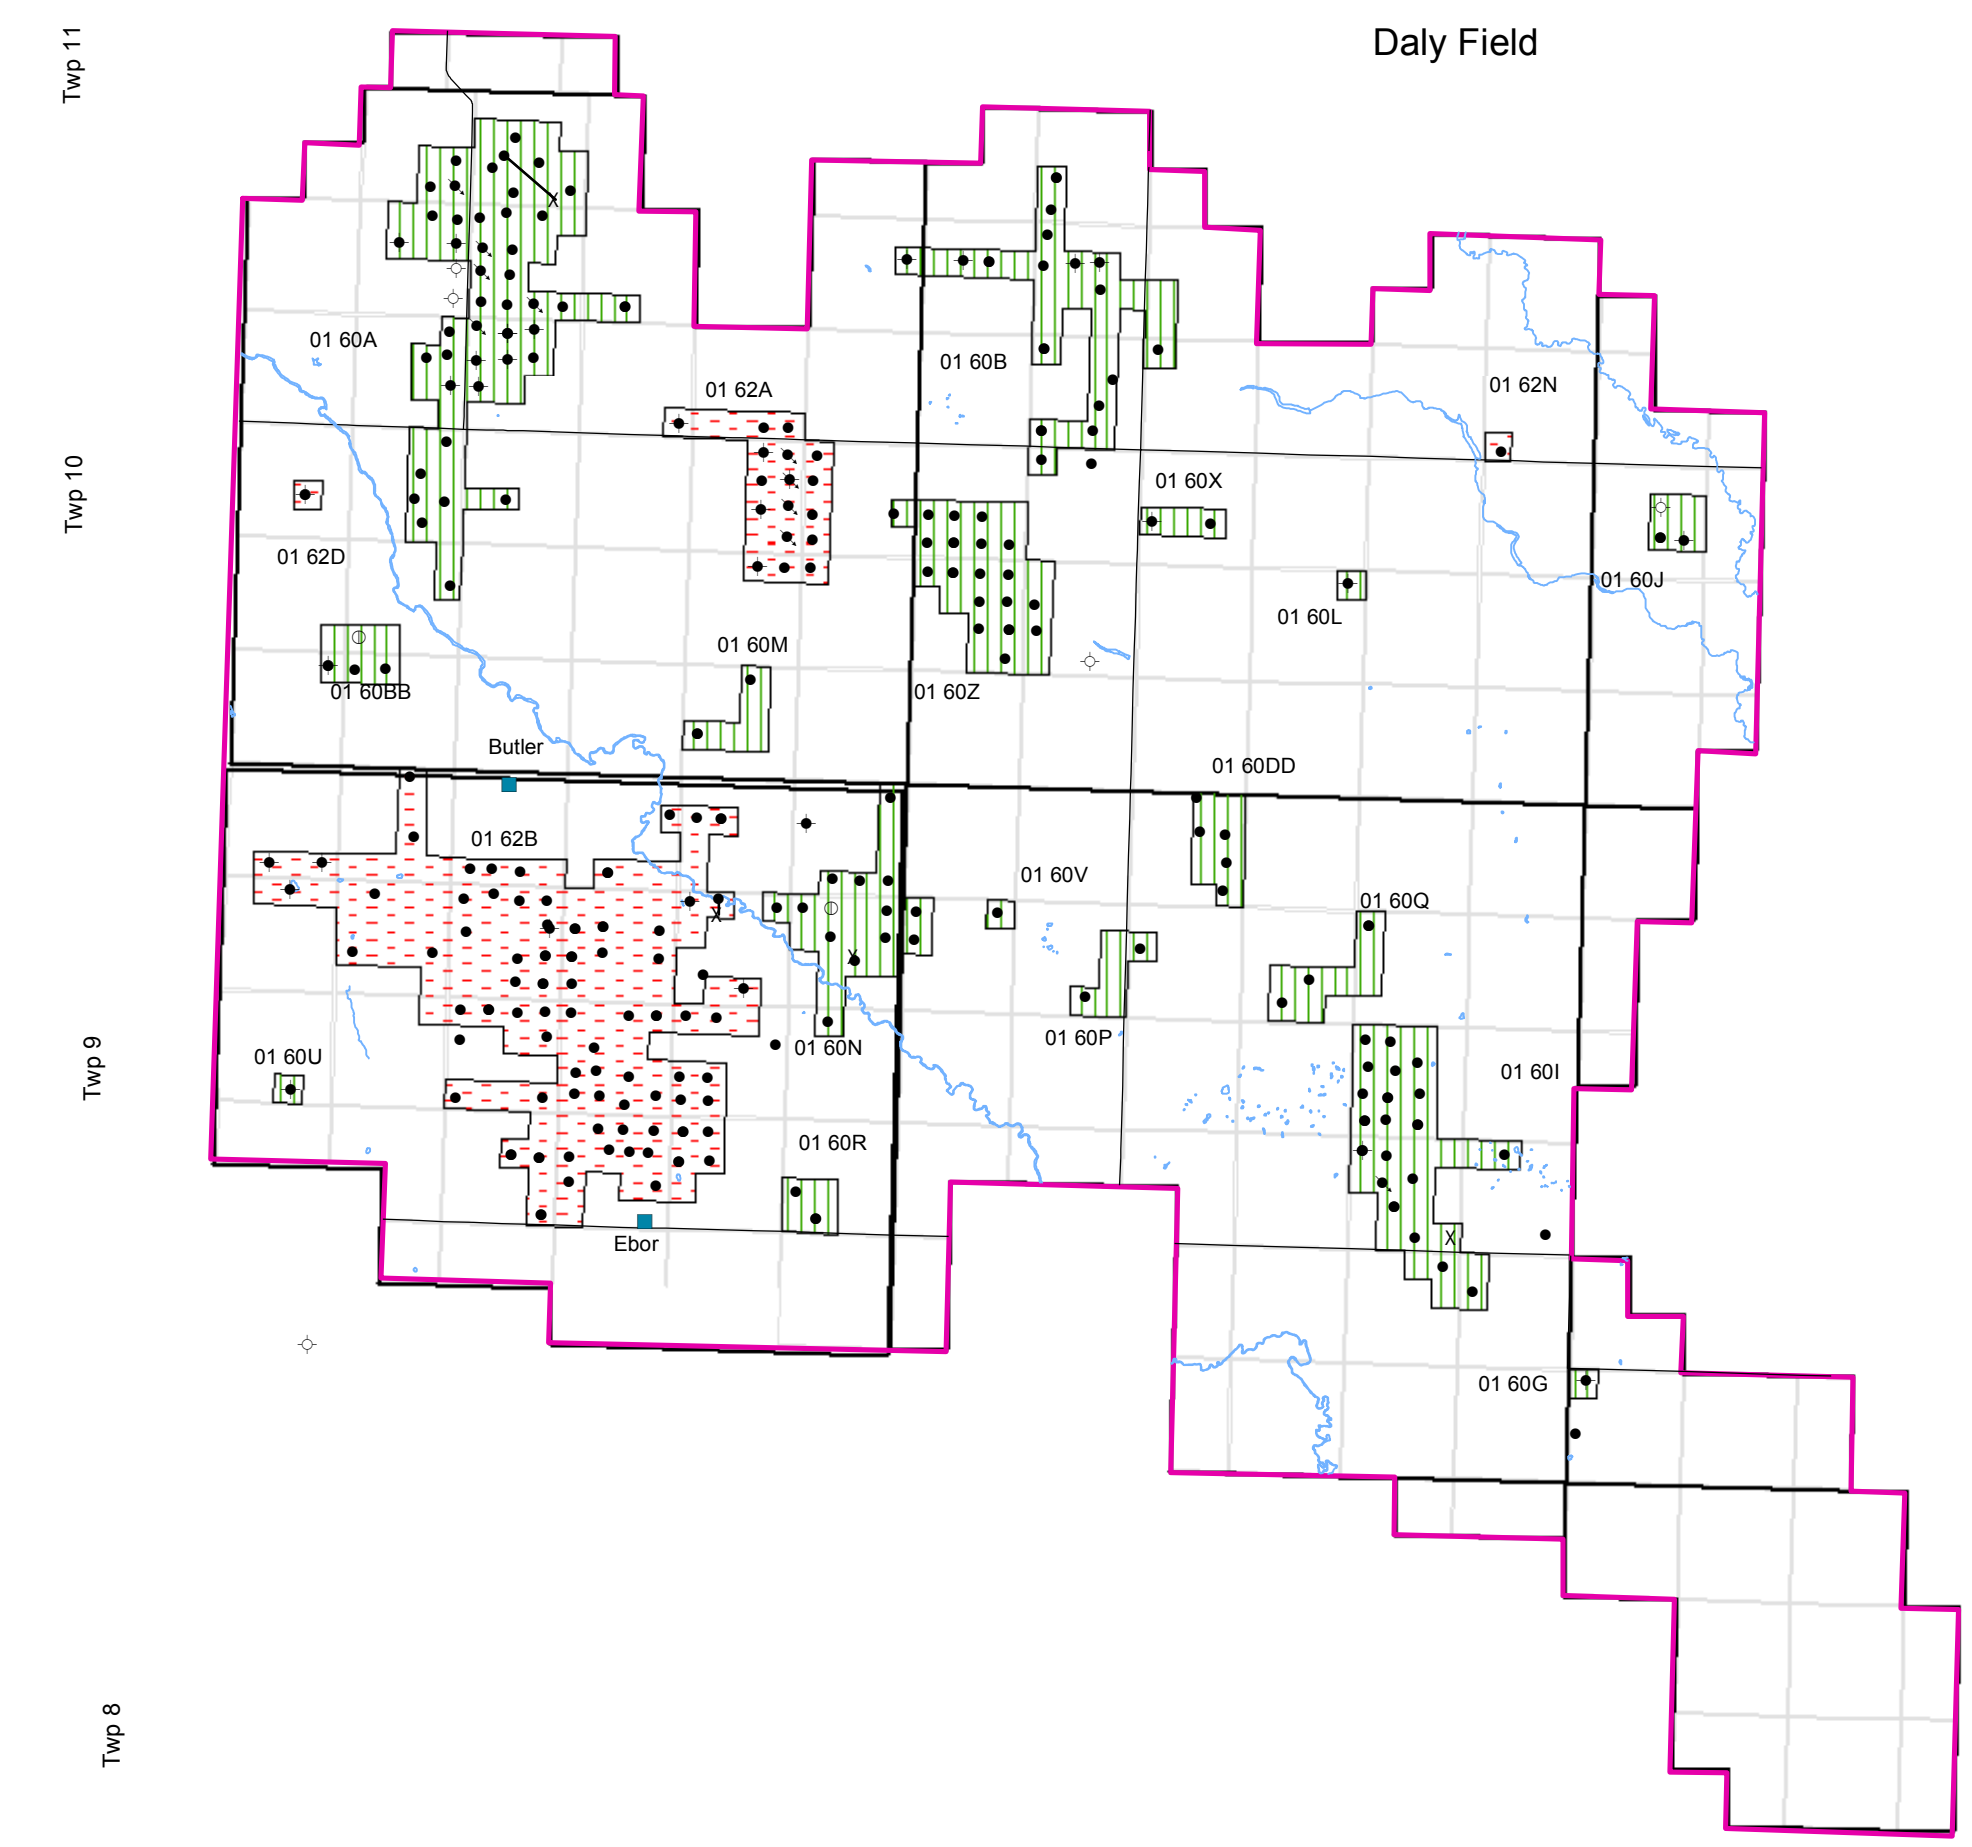

BAKKEN AND BAKKEN - THREE FORKS POOLS AND WELLS
(Previous and current non-confidential Bakken and Bakken - Three Forks completions)

Inset 2

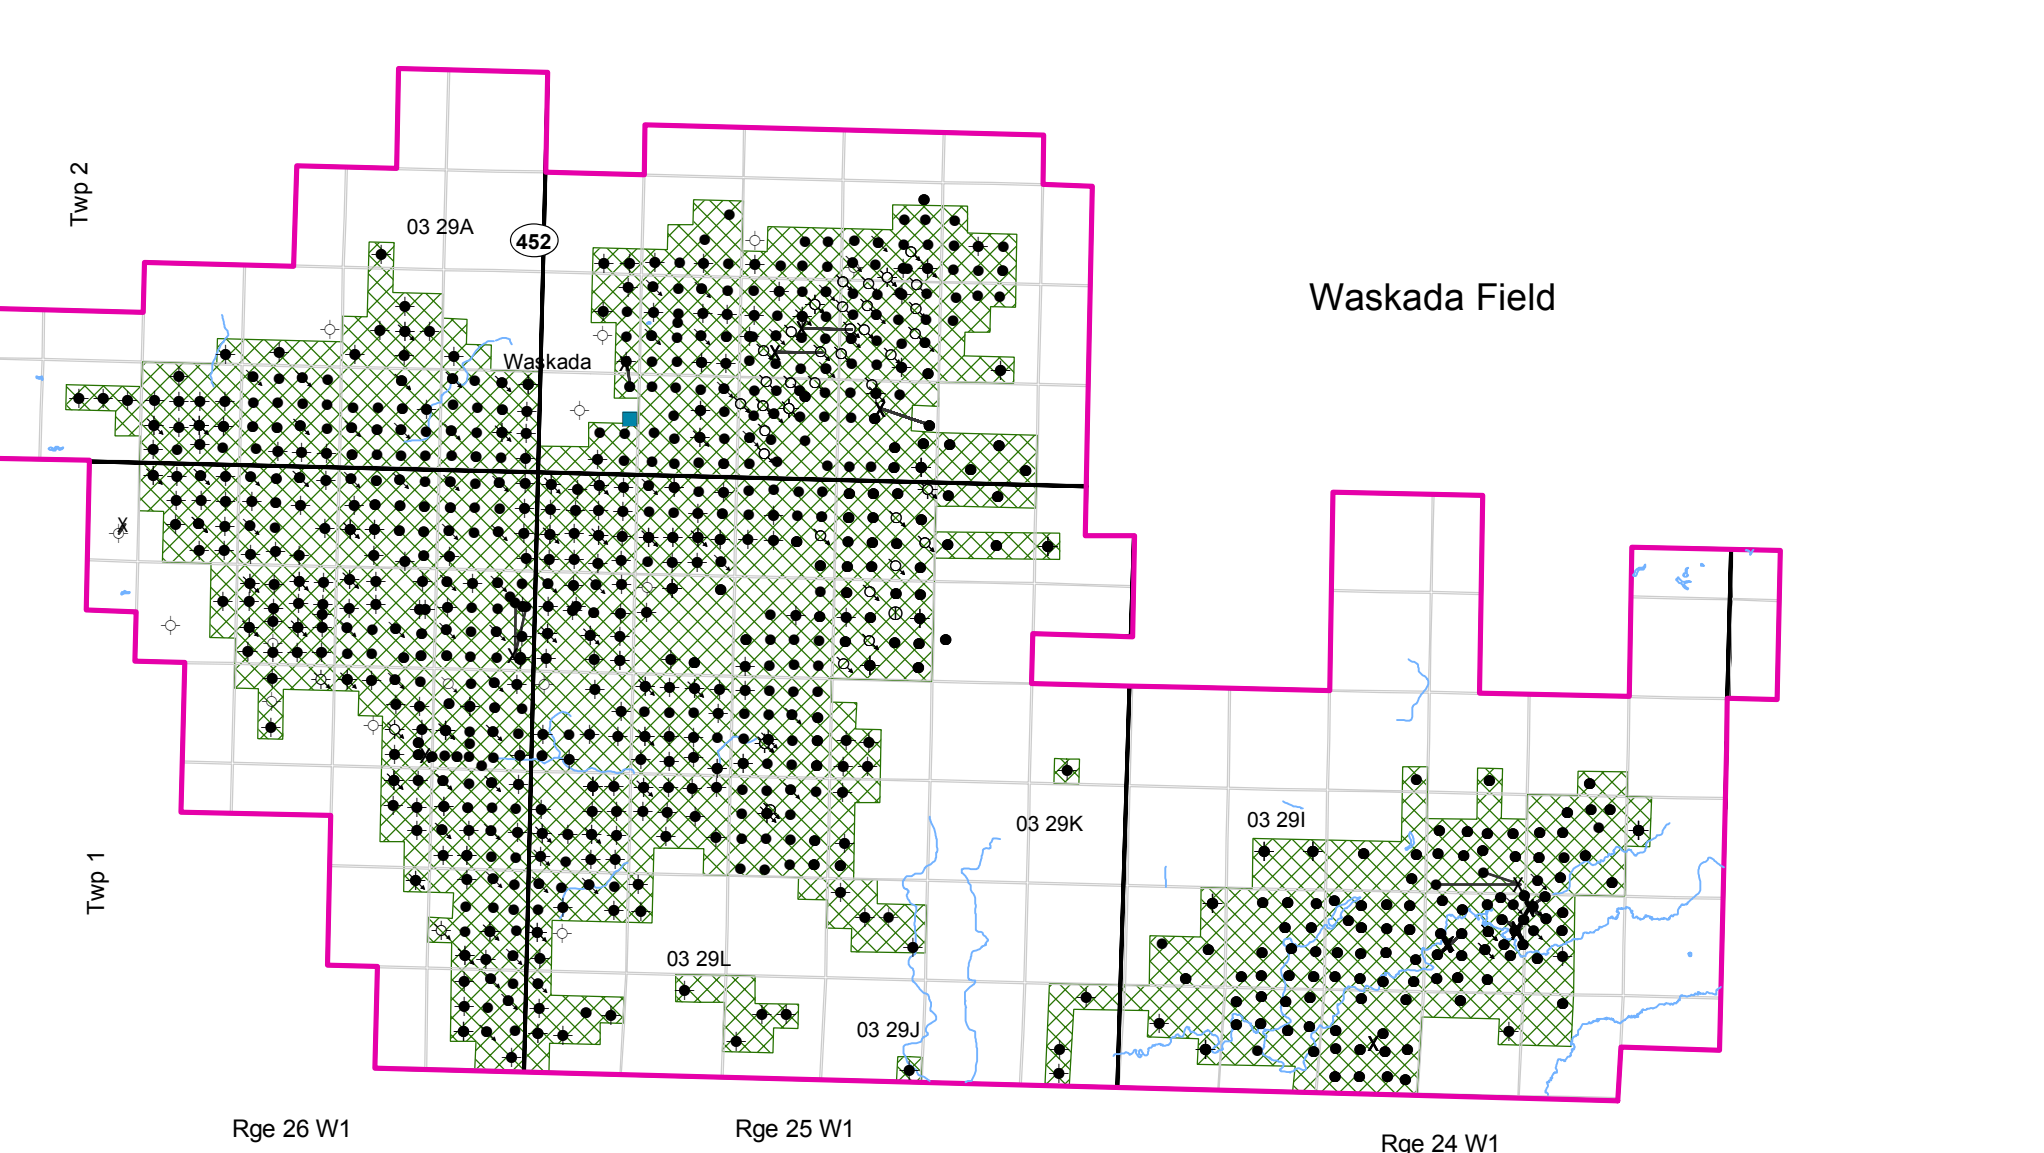

LOWER AMARANTH POOLS AND WELLS
(Previous and current non-confidential Lower Amaranth completions)

POOL LEGEND		
CRETACEOUS		
FAVEL FORMATION		
[Symbol]	10 Favel	
JURASSIC		
MELITA FORMATION		
[Symbol]	19 Melita	
AMARANTH FORMATION		
[Symbol]	29 Lower Amaranth	
MISSISSIPPIAN		
[Symbol]	35 Lower Amaranth - Mission Canyon, MC-3b	
[Symbol]	40 Lower Amaranth - Lodgepole	
MISSION CANYON FORMATION		
[Symbol]	41 MC-3 Undifferentiated	
[Symbol]	42 MC-3b	
[Symbol]	43 MC-3a	
[Symbol]	44 MC-1	
LODGEPOLE FORMATION		
[Symbol]	51 Dolomite	
[Symbol]	52 Whitewater Lake	
[Symbol]	53 Virden	
[Symbol]	54 Daly	
[Symbol]	56 Crinoidal	
[Symbol]	59 Lodgepole Undifferentiated	
BAKKEN AND THREE FORKS FORMATIONS		
[Symbol]	60 Bakken	
DEVONIAN		
[Symbol]	62 Bakken-Three Forks	
[Symbol]	65 Three Forks	
FIELD / POOL CODES		
Code	Field	Pool
01 99A	Daly (01)	Lodgepole A
01 99B	Daly (01)	Lodgepole B
01 99C	Daly (01)	Lodgepole C
01 99D	Daly (01)	Lodgepole D
01 99E	Daly (01)	Lodgepole E
01 99F	Daly (01)	Lodgepole F
01 99G	Daly (01)	Lodgepole G
01 99H	Daly (01)	Lodgepole H
01 99I	Daly (01)	Lodgepole I
01 99J	Daly (01)	Lodgepole J
01 99K	Daly (01)	Lodgepole K
01 99L	Daly (01)	Lodgepole L
01 99M	Daly (01)	Lodgepole M
01 99N	Daly (01)	Lodgepole N
01 99O	Daly (01)	Lodgepole O
01 99P	Daly (01)	Lodgepole P
01 99Q	Daly (01)	Lodgepole Q
01 99R	Daly (01)	Lodgepole R
01 99S	Daly (01)	Lodgepole S
01 99T	Daly (01)	Lodgepole T
01 99U	Daly (01)	Lodgepole U
01 99V	Daly (01)	Lodgepole V
01 99W	Daly (01)	Lodgepole W
01 99X	Daly (01)	Lodgepole X
01 99Y	Daly (01)	Lodgepole Y
01 99Z	Daly (01)	Lodgepole Z
01 99AA	Daly (01)	Lodgepole AA
01 99AB	Daly (01)	Lodgepole AB
01 99AC	Daly (01)	Lodgepole AC
01 99AD	Daly (01)	Lodgepole AD
01 99AE	Daly (01)	Lodgepole AE
01 99AF	Daly (01)	Lodgepole AF
01 99AG	Daly (01)	Lodgepole AG
01 99AH	Daly (01)	Lodgepole AH
01 99AI	Daly (01)	Lodgepole AI
01 99AJ	Daly (01)	Lodgepole AJ
01 99AK	Daly (01)	Lodgepole AK
01 99AL	Daly (01)	Lodgepole AL
01 99AM	Daly (01)	Lodgepole AM
01 99AN	Daly (01)	Lodgepole AN
01 99AO	Daly (01)	Lodgepole AO
01 99AP	Daly (01)	Lodgepole AP
01 99AQ	Daly (01)	Lodgepole AQ
01 99AR	Daly (01)	Lodgepole AR
01 99AS	Daly (01)	Lodgepole AS
01 99AT	Daly (01)	Lodgepole AT
01 99AU	Daly (01)	Lodgepole AU
01 99AV	Daly (01)	Lodgepole AV
01 99AW	Daly (01)	Lodgepole AW
01 99AX	Daly (01)	Lodgepole AX
01 99AY	Daly (01)	Lodgepole AY
01 99AZ	Daly (01)	Lodgepole AZ
01 99BA	Daly (01)	Lodgepole BA
01 99BB	Daly (01)	Lodgepole BB
01 99BC	Daly (01)	Lodgepole BC
01 99BD	Daly (01)	Lodgepole BD
01 99BE	Daly (01)	Lodgepole BE
01 99BF	Daly (01)	Lodgepole BF
01 99BG	Daly (01)	Lodgepole BG
01 99BH	Daly (01)	Lodgepole BH
01 99BI	Daly (01)	Lodgepole BI
01 99BJ	Daly (01)	Lodgepole BJ
01 99BK	Daly (01)	Lodgepole BK
01 99BL	Daly (01)	Lodgepole BL
01 99BM	Daly (01)	Lodgepole BM
01 99BN	Daly (01)	Lodgepole BN
01 99BO	Daly (01)	Lodgepole BO
01 99BP	Daly (01)	Lodgepole BP
01 99BQ	Daly (01)	Lodgepole BQ
01 99BR	Daly (01)	Lodgepole BR
01 99BS	Daly (01)	Lodgepole BS
01 99BT	Daly (01)	Lodgepole BT
01 99BU	Daly (01)	Lodgepole BU
01 99BV	Daly (01)	Lodgepole BV
01 99BW	Daly (01)	Lodgepole BW
01 99BX	Daly (01)	Lodgepole BX
01 99BY	Daly (01)	Lodgepole BY
01 99BZ	Daly (01)	Lodgepole BZ
01 99CA	Daly (01)	Lodgepole CA
01 99CB	Daly (01)	Lodgepole CB
01 99CC	Daly (01)	Lodgepole CC
01 99CD	Daly (01)	Lodgepole CD
01 99CE	Daly (01)	Lodgepole CE
01 99CF	Daly (01)	Lodgepole CF
01 99CG	Daly (01)	Lodgepole CG
01 99CH	Daly (01)	Lodgepole CH
01 99CI	Daly (01)	Lodgepole CI
01 99CJ	Daly (01)	Lodgepole CJ
01 99CK	Daly (01)	Lodgepole CK
01 99CL	Daly (01)	Lodgepole CL
01 99CM	Daly (01)	Lodgepole CM
01 99CN	Daly (01)	Lodgepole CN
01 99CO	Daly (01)	Lodgepole CO
01 99CP	Daly (01)	Lodgepole CP
01 99CQ	Daly (01)	Lodgepole CQ
01 99CR	Daly (01)	Lodgepole CR
01 99CS	Daly (01)	Lodgepole CS
01 99CT	Daly (01)	Lodgepole CT
01 99CU	Daly (01)	Lodgepole CU
01 99CV	Daly (01)	Lodgepole CV
01 99CW	Daly (01)	Lodgepole CW
01 99CX	Daly (01)	Lodgepole CX
01 99CY	Daly (01)	Lodgepole CY
01 99CZ	Daly (01)	Lodgepole CZ
01 99DA	Daly (01)	Lodgepole DA
01 99DB	Daly (01)	Lodgepole DB
01 99DC	Daly (01)	Lodgepole DC
01 99DD	Daly (01)	Lodgepole DD
01 99DE	Daly (01)	Lodgepole DE
01 99DF	Daly (01)	Lodgepole DF
01 99DG	Daly (01)	Lodgepole DG
01 99DH	Daly (01)	Lodgepole DH
01 99DI	Daly (01)	Lodgepole DI
01 99DJ	Daly (01)	Lodgepole DJ
01 99DK	Daly (01)	Lodgepole DK
01 99DL	Daly (01)	Lodgepole DL
01 99DM	Daly (01)	Lodgepole DM
01 99DN	Daly (01)	Lodgepole DN
01 99DO	Daly (01)	Lodgepole DO
01 99DP	Daly (01)	Lodgepole DP
01 99DQ	Daly (01)	Lodgepole DQ
01 99DR	Daly (01)	Lodgepole DR
01 99DS	Daly (01)	Lodgepole DS
01 99DT	Daly (01)	Lodgepole DT
01 99DU	Daly (01)	Lodgepole DU
01 99DV	Daly (01)	Lodgepole DV
01 99DW	Daly (01)	Lodgepole DW
01 99DX	Daly (01)	Lodgepole DX
01 99DY	Daly (01)	Lodgepole DY
01 99DZ	Daly (01)	Lodgepole DZ
01 99EA	Daly (01)	Lodgepole EA
01 99EB	Daly (01)	Lodgepole EB
01 99EC	Daly (01)	Lodgepole EC
01 99ED	Daly (01)	Lodgepole ED
01 99EE	Daly (01)	Lodgepole EE
01 99EF	Daly (01)	Lodgepole EF
01 99EG	Daly (01)	Lodgepole EG
01 99EH	Daly (01)	Lodgepole EH
01 99EI	Daly (01)	Lodgepole EI
01 99EJ	Daly (01)	Lodgepole EJ
01 99EK	Daly (01)	Lodgepole EK
01 99EL	Daly (01)	Lodgepole EL
01 99EM	Daly (01)	Lodgepole EM
01 99EN	Daly (01)	Lodgepole EN
01 99EO	Daly (01)	Lodgepole EO
01 99EP	Daly (01)	Lodgepole EP
01 99EQ	Daly (01)	Lodgepole EQ
01 99ER	Daly (01)	Lodgepole ER
01 99ES	Daly (01)	Lodgepole ES
01 99ET	Daly (01)	Lodgepole ET
01 99EU	Daly (01)	Lodgepole EU
01 99EV	Daly (01)	Lodgepole EV
01 99EW	Daly (01)	Lodgepole EW
01 99EX	Daly (01)	Lodgepole EX
01 99EY	Daly (01)	Lodgepole EY
01 99EZ	Daly (01)	Lodgepole EZ
01 99FA	Daly (01)	Lodgepole FA
01 99FB	Daly (01)	Lodgepole FB
01 99FC	Daly (01)	Lodgepole FC
01 99FD	Daly (01)	Lodgepole FD
01 99FE	Daly (01)	Lodgepole FE
01 99FF	Daly (01)	Lodgepole FF
01 99FG	Daly (01)	Lodgepole FG
01 99FH	Daly (01)	Lodgepole FH
01 99FI	Daly (01)	Lodgepole FI
01 99FJ	Daly (01)	Lodgepole FJ
01 99FK	Daly (01)	Lodgepole FK
01 99FL	Daly (01)	Lodgepole FL
01 99FM	Daly (01)	Lodgepole FM
01 99FN	Daly (01)	Lodgepole FN
01 99FO	Daly (01)	Lodgepole FO
01 99FP	Daly (01)	Lodgepole FP
01 99FQ	Daly (01)	Lodgepole FQ
01 99FR	Daly (01)	Lodgepole FR
01 99FS	Daly (01)	Lodgepole FS
01 99FT	Daly (01)	Lodgepole FT
01 99FU	Daly (01)	Lodgepole FU
01 99FV	Daly (01)	Lodgepole FV
01 99FW	Daly (01)	Lodgepole FW
01 99FX	Daly (01)	Lodgepole FX
01 99FY	Daly (01)	Lodgepole FY
01 99FZ	Daly (01)	Lodgepole FZ
01 99GA	Daly (01)	Lodgepole GA
01 99GB	Daly (01)	Lodgepole GB
01 99GC	Daly (01)	Lodgepole GC
01 99GD	Daly (01)	Lodgepole GD
01 99GE	Daly (01)	Lodgepole GE
01 99GF	Daly (01)	Lodgepole GF
01 99GG	Daly (01)	Lodgepole GG
01 99GH	Daly (01)	Lodgepole GH
01 99GI	Daly (01)	Lodgepole GI
01 99GJ	Daly (01)	Lodgepole GJ
01 99GK	Daly (01)	Lodgepole GK
01 99GL	Daly (01)	Lodgepole GL
01 99GM	Daly (01)	Lodgepole GM
01 99GN	Daly (01)	Lodgepole GN
01 99GO	Daly (01)	Lodgepole GO
01 99GP	Daly (01)	Lodgepole GP
01 99GQ	Daly (01)	Lodgepole GQ
01 99GR	Daly (01)	Lodgepole GR
01 99GS	Daly (01)	Lodgepole GS
01 99GT	Daly (01)	Lodgepole GT
01 99GU	Daly (01)	Lodgepole GU
01 99GV	Daly (01)	Lodgepole GV
01 99GW	Daly (01)	Lodgepole GW
01 99GX	Daly (01)	Lodgepole GX
01 99GY	Daly (01)	Lodgepole GY
01 99GZ	Daly (01)	Lodgepole GZ
01 99HA	Daly (01)	Lodgepole HA
01 99HB	Daly (01)	Lodgepole HB
01 99HC	Daly (01)	Lodgepole HC
01 99HD	Daly (01)	Lodgepole HD
01 99HE	Daly (01)	Lodgepole HE
01 99HF	Daly (01)	Lodgepole HF
01 99HG	Daly (01)	Lodgepole HG
01 99HH	Daly (01)	Lodgepole HH
01 99HI	Daly (01)	Lodgepole HI
01 99HJ	Daly (01)	Lodgepole HJ
01 99HK	Daly (01)	Lodgepole HK
01 99HL	Daly (01)	Lodgepole HL
01 99HM	Daly (01)	Lodgepole HM
01 99HN	Daly (01)	Lodgepole HN
01 99HO	Daly (01)	Lodgepole HO
01 99HP	Daly (01)	Lodgepole HP
01 99HQ	Daly (01)	Lodgepole HQ
01 99HR	Daly (01)	Lodgepole HR
01 99HS	Daly (01)	Lodgepole HS
01 99HT	Daly (01)	Lodgepole HT
01 99HU	Daly (01)	Lodgepole HU
01 99HV	Daly (01)	Lodgepole HV
01 99HW	Daly (01)	Lodgepole HW
01 99HX	Daly (01)	Lodgepole HX
01 99HY	Daly (01)	Lodgepole HY
01 99HZ	Daly (01)	Lodgepole HZ
01 99IA	Daly (01)	Lodgepole IA
01 99IB	Daly (01)	Lodgepole IB
01 99IC	Daly (01)	Lodgepole IC
01 99ID	Daly (01)	Lodgepole ID
01 99IE	Daly (01)	Lodgepole IE
01 99IF	Daly (01)	Lodgepole IF
01 99IG	Daly (01)	Lodgepole IG
01 99IH	Daly (01)	Lodgepole IH
01 99II	Daly (01)	Lodgepole II
01 99IJ	Daly (01)	Lodgepole IJ
01 99IK	Daly (01)	Lodgepole IK
01 99IL	Daly (01)	Lodgepole IL
01 99IM	Daly (01)	Lodgepole IM
01 99IN	Daly (01)	Lodgepole IN
01 99IO	Daly (01)	Lodgepole IO
01 99IP	Daly (01)	Lodgepole IP
01 99IQ	Daly (01)	Lodgepole IQ
01 99IR	Daly (01)	Lodgepole IR
01 99IS	Daly (01)	Lodgepole IS
01 99IT	Daly (01)	Lodgepole IT
01 99IU	Daly (01)	Lodgepole IU
01 99IV	Daly (01)	Lodgepole IV
01 99IW	Daly (01)	Lodgepole IW
01 99IX	Daly (01)	Lodgepole IX
01 99IY	Daly (01)	Lodgepole IY
01 99IZ	Daly (01)	Lodgepole IZ
01 99JA	Daly (01)	Lodgepole JA
01 99JB	Daly (01)	Lodgepole JB
01 99JC	Daly (01)	Lodgepole JC
01 99JD	Daly (01)	Lodgepole JD
01 99JE	Daly (01)	Lodgepole JE
01 99JF	Daly (01)	Lodgepole JF
01 99JG	Daly (01)	Lodgepole JG
01 99JH	Daly (01)	Lodgepole JH
01 99JI	Daly (01)	Lodgepole JI
01 99JJ	Daly (01)	Lodgepole JJ
01 99JK	Daly (01)	Lodgepole JK
01 99JL	Daly (01)	Lodgepole JL
01 99JM	Daly (01)	Lodgepole JM
01 99JN	Daly (01)	Lodgepole JN
01 99JO	Daly (01)	Lodgepole JO
01 99JP	Daly (01)	Lodgepole JP
01 99JQ	Daly (01)	Lodgepole JQ
01 99JR	Daly (01)	Lodgepole JR
01 99JS	Daly (01)	Lodgepole JS
01 99JT	Daly (01)	Lodgepole JT
01 99JU	Daly (01)	Lodgepole JU
01 99JV	Daly (01)	Lodgepole JV
01 99JW	Daly (01)	Lodgepole JW
01 99JX	Daly (01)	Lodgepole JX
01 99JY	Daly (01)	Lodgepole JY
01 99JZ	Daly (01)	Lodgepole JZ
01 99KA	Daly (01)	Lodgepole KA
01 99KB	Daly (01)	Lodgepole KB
01 99KC	Daly (01)	Lodgepole KC
01 99KD	D	